装订尺寸105x143mm 2023.6.9

wireless



Please read the user manual carefully and save

Juicing bucket



it before using this product For future reference

 
2. Use a cross screwdriver to remove three screws and separate the gland from the main engine.

This product is approved for delivery

after passing the standard inspection



3. Disassemble and separate the battery assembly from the host and take out the battery



4. Dispose of waste batteries safely



- 1. Before discarding the appliance, the battery must be removed from the appliance
- 2. When removing the battery, the appliance must be powered off.

PRODUCTINTRODUCTION



Model/Product Name	BXM-189	Rated capacity	500mL
Charging specifications	5V=== 1A	Rated voltage	7.4V
Rated power	70W	Battery capacity	1200mAh
Performance standards	GB4706.1-2005;GB4706.30-2008		

Warm prompt: In order to meet the transportation requirements, the juice cup battery is only 40% of the factory power. It is recommended to charge it for more than 4 hours for the first time to improve the

PRODUCT INTRODUCTION:

- 1. Use the combination of host + juice cup to make a juice machine for delicious juice.
- 2. The combination of cup cover assembly + juice cup is used for massive water replenishment.

1. Please read the instructions carefully before using this product. 2. During the work of the product, it is strictly forbidden to open the juice cup to avoid interrupting normal work.

IMPORTANT SAFE GUARDS

- 3. When the product is working, it is strictly forbidden to touch movable parts such as blades and motors, so as to avoid injury or damage to
- 4. The juice cup can be opened after the blade stops rotating.
- 5. It is strictly forbidden to disassemble or alter this product by oneself. 6. Please clean the product in time after use. Wash the parts in contact with food with clean water. Be careful when emptying the cup and cleaning the parts. Be sure to pay attention to the sharp blade to avoid cutting (protective gloves can be worn).
- 7. After charging, when unplugging the plug, please hold the plug and pull
- it out without pulling the wire. 8. Do not place in or near flammable gases or electric stoves, or in hot
- 9. Do not immerse the power adapter and main engine into water or other liquids to avoid the risk of fire, electric leakage or personal injury. 10. Appliances can not be used by persons with reduced physical. sensory or mental capabilities or lack of experience and knowledge

if they have been given supervision or instruction concerning use of

- the appliance in a safe way. 11. Children should be supervised to ensure that they do not play with
- 12. In the absence of supervision, the cleaning and maintenance work should not be done by the child.
- 13. Use of accessories not recommended or sold by the original manufacturer may cause risks of fire, electric leakage or personal injury. 14. If the supply cord is damaged, it must be replaced with a special
- cord or a special component purchased from its manufacturer or maintenance department.
- 15. This equipment must be used in accordance with the instructions, and must not be used for other purposes.
- 16. Before using, please make sure that the mainframe is firmly fixed.
- 17. Never attempt to shield the safety interlock of the lid. 18. Please keep this manual for future reference.

Symptom	Confirmation matters	Take steps
Product does not start	Is it used continuously for a long time? Is the food stuck on the blade? Is the host and the juice cup not rotated in place? The red light flickered.	Please wait for the motor to cool down before using. Please remove the remaining food and use it again. Please install the host and juice cup in place before starting. Please fully charge before use
When working, the blade is stuck and the red light flashes	The fruit granules are too large to cause the blade stucking Fruits and liquids exceed the maximum scale rated by the product.	The fruits (apples, pears, etc.) were washed, peeled and nucleated, and cut into small squares of about 1 cm * 1 cm . Don't let the blade touch the pulp first, then turn on and put it in position. Reduce the liquid capacity not to exceed the rated capacity of the cup.
Motor burnt smell	· Whether continuous use time is longer	The high-powered motor is inside the main unit. Due to the friction of the carbon brush, an odor will occur, but it is not a product failure Please feel free to use.
No prompt for charging (red light does not light)	Bad connection of USB data line Due to the identification restrictions of some branded adapters on the electrical equipment, the actual output voltage and current do not meet the requirements.	Check the connection status of USB data line to ensure that the connection is normal. Please charge the product with the universal adapter of 5V /1A and above, which is purchased through regular channels.

ATTENTION ENVIRONMENT PROTECTION



Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

Attention Environment Protection

3. $\frac{500}{\text{Juice max}}$: use the maximum scale to stir the juice 1000 : it is used for sports. The maximum Capacity for human body to replenish water and drink water (the water

CHARGING MODE:

a. After connecting the USB charging cable to the host and the

temperature shall not exceed 60 °C)

adapter, the display light will be red; b. When the product is fully charged, the display light is Green.

WORKING MODE:

- There is only one switch gear. The specific functions are as follows: ① Double-click the button switch , The display light is Green, the product runs at full speed; when the battery voltage is lower than 7.2V, the red indicator light flashes, the machine stops running; if the indicator light flashes during the work, it means the battery is fast Exhausted.
- 2) If the blade is stuck by food during the working process of the product, the product will stop working immediately and the red display light will start constantly on, Press the key switch during jamming, and the product will not react.
- 3 During the working process, click and press the "key switch", and the product stops working.
- 4 During charging, the display light is red; After charging, the display light is white. When the battery is fully charged, the product can rk 8-10 times (the working time is set to 30 sec and the interval time is not less than 3 minutes. After working for 5 times continuously, the product needs to rest for 10 minutes.

OPERATIONINSTRUCTION

Clean and dry the juice cup(the water temperature shall not exceed 60 °C) and straw assembly of the main machine thoroughly before using it for the first time; The host machine shall be wiped with a rag and shall not be soaked in water.

- 8. Do not put any parts of this product into dishwasher, microwave oven, disinfection cabinet or hot water above 60°C for cleaning or disinfection, and do not use other equipment for heating, so as to avoid deformation or damage of parts
- 9. Before abandoning the appliance, use tools to pry open the shell,
- and the battery must be removed from the appliance. 10. When removing the battery, the appliance must be powered off. 11. Batteries should be disposed of safely.
- 12. The product has built-in lithium batteries. Pay attention to the following items:
- a. Store and use this product in an environment of 0-40 °C; b. If not used for a long time, please charge every three months to
- prevent battery damage. c. Charging speed may be slower in the environment below 10 °C,
- which is a normal phenomenon. d. Please charge the battery in time when the power is insufficient.
- 13. When discarding this product and product packaging, please recycle it by the relevant qualified department, and snip off the power cord when discarding.

WASTE BATTERY TREATMENT

1. Use a slotted screwdriver or flat tool to pry the top cover from the



PRECAUTIONS

Warning: Be alert to the risks that may lead to danger, serious injury and heavy property loss.

- 1. Never immerse the main engine in water.
- 2. Do not put overheated ingredients or liquid (≥60 °C) in the juice cup to avoid bursting, splashing and scalding the juice cup. 3. This product contains lithium-ion batteries. It is forbidden to
- possible damage to the core or other hazards. 4. It is strictly forbidden to disassemble, squeeze, puncture, or shortcircuit the product or put it into water or fire in an environment where the temperature is higher than 60 °C.

dismantle the shell of the product without authorization to avoid

ATTENTION: Pay attention to the risks that may result in injury to people or damage to goods.

- 1. During the operation of the product, it is strictly prohibited to open the juice cup to avoid the interruption of the normal operation of the product.
- 2. This product is intended for home use and should not be used for other purposes.
- 3. Stirring working time: Please operate strictly according to the rated working time, each stirring working time is set to 30 seconds, each time interval is not less than 3 minutes, and then work after the motor cooling.
- 4. It is strictly forbidden to idling (that is, there is no ingredients in the juice cup) or excessive use.
- 5. Stirring up bananas and other foamed foods may cause product
- 6. Please clean the product in time after use, and clean the parts in contact with food with clean water. Please be careful when cleaning the juice cup and parts. Be sure to pay attention to the sharp blade to avoid cutting (wear protective gloves).
- 7. Do not put the product in the environment of high temperature, strong magnetism, flammable and explosive gases (such as natural gas, biogas, etc.) to avoid abnormal operation of components or fire

Before using the product for the first time, please ensure that the battery of the product is fully charged and thoroughly clean the parts in contact with the food materials. This product is equipped with double safety protection. If the host is placed separately or not rotated and installed in place with the juice cup, and the alignment dot is not aligned, press the "key switch", the product does not work, and the display light is white and flashing, Only when the host and the juice cup are rotated and fixed in place, can double-click the "key switch" to start the work, and the working status indicator is white.

1. The fruits (apples, pears, etc.) were washed, peeled and nucleated, and cut into small squares of about 1 cm * 1 cm * 1 cm .



2. Put the cut fruit into the fruit juice cup and add water or milk and other liquids. The total amount of ingredients and liquids shall not exceed the maximum scale mark of mixing (500ml).



3. Rotate and install the host on the juice cup, tighten the host and the juice cup in place, and ensure that the host and the juice cup are tightened until the green light flashes



4. Click the "button" switch on the product host, invert the product and place it flat on the desktop or hold it in your hand. The product starts working, and the single working time of the product is set to 30 seconds. During the work process, shaking the product to the left and right for better stirring effect and a more delicate taste.

Note: 1. During the working process, click the "key switch" once, and the product will stop working immediately. 2. If the blade is stuck at startup, the product can be placed upright and then placed upside down after normal startup.



5. After mixing and making the juice, screw the host out of the juice cup. You can put the straw assembly and cup cover assembly into the juice cup to drink the juice, or pour the juice in the juice cup into the cup to drink



6. Plug the magnetic charging wire into the 5V === 1A standard USB adapter, and pull the magnetic suction head of the charging wire onto the charging base of the host to charge the product. When charging, the display light is red, and after charging, the indicator light is white; During charging, the product cannot be started.



Note: 1. When charging, please use the standard USB adapter, and the magnetic suction head should be firmly sucked on the charging base of the host.

2. Do not use the USB port of the computer to charge the

CLEANING METHOD OF JUICE CUP

- 1. Please make sure the blade stops running before cleaning.
- 2. Do not use steel balls, abrasive cleaners or corrosive liquids (such as gasoline and acetone) to clean this product.
- 3. The host can be wiped with a wet cloth that has been twisted dry; Do not wash, soak or spray in water or other liquids to avoid device damage or product leakage.
- 4. Please wash the inside of the juice cup and the parts in contact with food with clean water and wipe or dry it in time. Please be careful to avoid cutting (protective gloves can be worn).
- 5. When storing, please ensure that the product is clean and dry, and place it in a dry, ventilated place away from direct sunlight.
- 6. Quick cleaning tips for juice machine: add an appropriate amount of water into the juice cup (the water temperature is lower than 60 $^{\circ}$ C), install the host on the juice cup, double-click the "button" to start the juice machine and turn it upside down, and stir the water once.